

FM 2-WAY TRANSMITTER

TRANSMITTER OPERATIONS



1- ARM/DISARM/PANIC Button - To arm or disarm the system, press button 1. To activate the panic feature, press and hold button 1 for three seconds.

2- START Button - To start the vehicle, press and hold button 2 for two seconds. To shut down the vehicle, press and hold button 2 for two seconds.


3- TRUNK/AUX 1 Button - To activate the trunk output, press and hold button 3 for two seconds.



4- AUXILIARY 2 Output - To activate the Aux. 2 output, press and hold button 4 for two seconds.


5- CONFIRMATION Button - To check current status of the system, press button 5. The current status of the system will be displayed & illuminated on the transmitter.


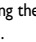
Transmitter Functions

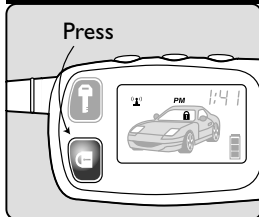Button 1




Arm -
The display will show  and the animated  icon to confirm arming. Lights will flash once.

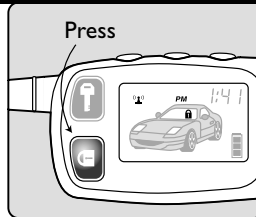


 
Disarm -
The display will show  and to confirm disarming the animated  icon. Lights will flash twice.


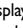
Transmitter Functions

Button 2

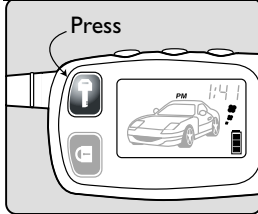


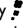
Start -
The display  will indicate the ignition is turned on and the engine is going to crank.




Engine Run -
When the engine starts and continues to run, the  icon will be displayed, and the  icon will remain displayed.


Button 3

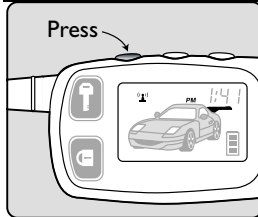


Trunk -
The display will show and flash this icon  opening to confirm.

Button 4

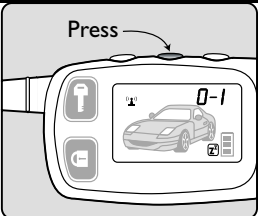

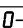Aux. 2 Output -
The display will show  to confirm the Auxiliary 2 Output.

Button 5

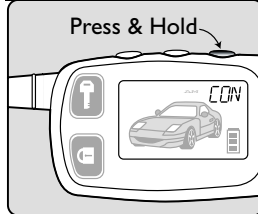

Status Confirmation
Press and Hold to toggle to the appropriate feature. Release at the desired status function:
CON - Confirm Alarm or Remote Start Status.



 
Continue to hold Button 5:

CHP- Feature not available



Continue to hold Button 5:

SND - Transmitter Alert Tones ON/OFF (Repeating the cycle and releasing at SND turns on or off)



Continue to hold Button 5:

PSV- Feature not available




Continue to hold Button 5:


LPG- Feature not available

Transmitter Functions

Buttons 2&3

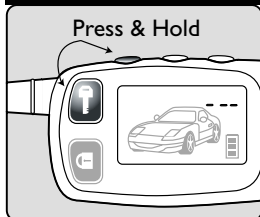


Press button #5 (Confirm Status) to set. The transmitter will play a tune to indicate new time is set.

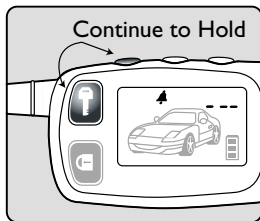

Turning Off Alarm Clock -

Press and hold buttons 2 & 3 until the transmitter beeps three times and the alarm clock icon appears. Press transmitter button 1. The icon will disappear and the alarm will be turned off.

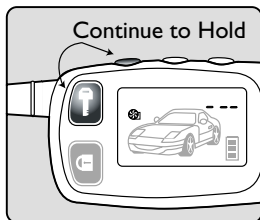

Turning Off Start Timer -

Press and hold buttons 2 & 3 until the transmitter beeps four times and the alarm clock icon appears. Press button 1. The icon will disappear and the alarm will be turned off.

Set Clock -

Press and hold buttons 2 & 3 for 2 seconds. The transmitter will beep twice and the display will show . Change hour by pressing button 2; change minute by pressing button 3.

Set Alarm Clock

Press and hold buttons 2 & 3 until the transmitter beeps three times and the alarm clock icon appears. Confirm the same way as setting clock.

Set Start Timer -

 
Press and hold buttons 2 & 3 until the transmitter beeps four times and the fan icon appears. Set the start timer the same way as setting the clock. The fan icon will remain displayed.

Alarm Trigger Indications




Warn Away -

If the warning stage is triggered, the icon will flash.




Shock Sensor -

 The display will show Shock and flash the animated icon to indicate shock sensor triggering.




Door -

 If a door is opened while the system is armed, the display will show .



Hood -

 If the hood or trunk is opened while the system is armed, the icon will show and the lights will flash.



Panic -

The display will show *PANIC* when the Arm/Disarm button is held to enter the Panic mode.

Low Battery Indication

 


Low Battery -

When the transmitter battery needs replacement, the display will flash the icon.


Transmitter Functions

Valet Indications




Valet Mode -

 The display will show --U to confirm entering the Valet mode.




Unlock (Valet) -

If the doors are unlocked with the transmitter in Valet mode, the display will show the  icon to confirm unlock.



Lock (Valet) -

If the doors are locked with the transmitter in Valet mode, the display will show  to confirm locking.

Connecting FM 2-way Kit to System Module

