

**1**  
channel

BW1060

## OWNERS MANUAL



### Standard Features


*The following features are standard with your 1 Channel Security System:*

- 2-two button, 1 channel remote controls
- Status indicator (red LED)
- Multi-tone siren (120db)
- Single stage impact detector
- Remote panic
- Remote chirp mute
- Remote trigger bypass

**Optional Features** *that you may add to your 1 Channel (Consult with your technician)*


- Flashing parking lights
- Hood and trunk protection
- Starter interrupt
- Anti car jacking
- Current sense

**Note:** *Some features and options may require additional parts and labor, and may not be appropriate for certain vehicles.*

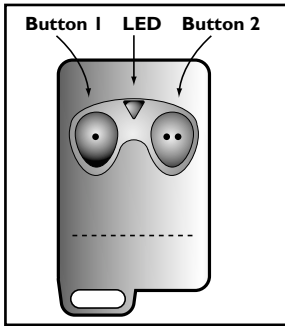

#1 on your remote.

The siren will chirp twice and your parking lights will flash twice (optional). The LED will stop flashing, your system is disarmed.

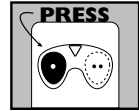

## **System Operation**

### **ARMING OPERATION:**

#### **Active Arming-**


To activate the alarm, simply press button #1 on your remote control. You will hear one chirp from your siren, your parking lights will flash one time (optional) and the LED will turn on solid for 3 seconds then it will start flashing slowly, the system is now armed.



### **REMOTE PANIC:**


For your personal safety you may activate the siren by pressing button #1 on your remote for 3 seconds.

This will trigger the system into the Panic mode. The siren will sound and the parking lights will flash (optional). The panic mode will run for 45 seconds, or until you press button #1 on your remote again. This feature will not operate when the ignition is on.

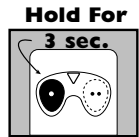

### **SILENT ARM/DISARM:**

If you wish to arm or disarm your alarm, but do not want the siren to chirp simply press button #2 on the remote control, temporarily deleting the arm or disarm chirps.

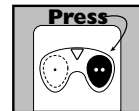

### **DISARMING OPERATION:**


To deactivate the alarm press button

## **ENTRY VIOLATION MEMORY:**

In the event that your system is triggered and runs an entire cycle, when you return to disarm it, the LED flashes rapidly and instead of the usual 2 chirps you will hear 3 chirps, this is to indicate that the your system was set off., parking lights will flash 3 times as well (optional).

## **TEMPORARY REMOTE TRIGGER & SENSOR BYPASS:**

If you would like to temporarily

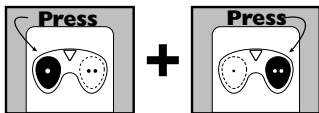

arm the system but only want to have the starter disable engaged (the doors, hood, and or trunk, and any sensors would not trigger the alarm). Press button# 1 to arm, then within 5 seconds press button# 2. You will hear a second confirmation chirp to let you know that the system will NOT monitor the doors, hood, or trunk. The starter disable function will be engaged.

## **REPLACING STOLEN OR LOST REMOTE CONTROLS:**

Your authorized Black Widow Dealer can program more remote control transmitters, and erase the codes of stolen or lost transmitters at the same time so they will not be able to operate the system.

## **LED STATUS INDICATORS**

**Off**= System off

**Slow Flashing**= System Armed

**Rapid Flashing** System was triggered while away.

**On Solid (After Arming)**= Pre Arm State, usually approximately 3 seconds.

**On Solid (when disarmed)**= Door/Hood is open (optional).


## **CHIRP INDICATIONS:**

**One Chirp**= Armed

**Two Chirps**= Disarmed

**Three Chirps**= Disarmed, but system was triggered while away.

**Four Chirps**= 30 seconds after arming, indicates faulty sensor or trigger.

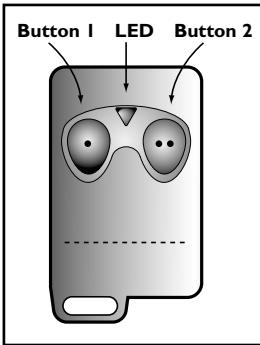

### REMOTE CONTROL FEATURE OPERATION

Button	Duration	Function
1	SHORT	ARM/DISARM
1	LONG (3 SEC.)	REMOTE PANIC
2	SHORT	SILENT ARM/DISARM
1/2	SHORT/SHORT	TEMP.TRIGGER BYPASS

### REMOTE CONTROL FEATURE OPERATION WITH THE IGNITION KEY ON

Button	Duration	Function
1	LONG (5 SEC.)	CURRENT SENSE
2	LONG (5 SEC.)	ANTI CAR JACK
1/2	LONG (5 SEC.)	SHOCK SENSOR

© David Levy Company, Inc., Rev. 2, 01/01 • Cerritos, Ca 90703