

### Features available on your security system:

 
- Status indicator (red LED)
- Valet / override switch
- Multi-tone siren
- Starter disable
- Dual stage impact detector
- Remote panic
- Remote chirp mute
- Remote sensor/trigger bypass
- Passive or active arming
- Remote keyless entry
- Remote trunk or hatch release
- Remote auto start
- Power window roll up
- Flashing parking lights
- Illuminated entry
- Hood and trunk protection

**Note:** Some features may require additional parts and labor, and may not be appropriate for certain vehicles. Consult your authorized dealer.

## System Operation

### ARMING OPERATION:

**Active Arming**—To activate the alarm, simply press button #1 on your remote control, you will hear one chirp from your siren and your parking lights will flash one time (optional). Your doors will lock (optional), and the L.E.D. will turn solid for 10 seconds then it will start flashing slowly, the system is now armed.



or



**Passive Arming**— If your system was installed to arm passively, simply turn off your ignition key and exit the vehicle, the system will arm 30 seconds after the last door is closed. After you shut off the ignition, the LED will start flashing rapidly to let you know that the system is in the Pre Arm state. You can always arm the system at any time by pressing button #1 on the remote.

### DISARMING OPERATION:

To deactivate the alarm, press button #1 on your remote, the siren will chirp twice and your parking lights will flash twice (optional), then stay on for 30 seconds or until you either turn the ignition on or reararm the system (optional car location feature). The LED will stop flashing, the doors will unlock



 
or



(optional), your system is disarmed. If you have the (optional) illuminated entry system installed the interior light will flash twice then stay on for 30 seconds or until you turn the ignition on or rearm the system.

### VALET MODE:


Valet mode will keep your alarm system from



passive arming (if programmed to be passive arming), if you need to have your vehicle serviced, or run it through the car wash, etc. To put your system in Valet Mode, disarm system, turn the ignition key on and press and hold your valet/override switch in for approximately 3 seconds, the LED will turn solid, and siren will chirp once. Your vehicle's system is in Valet Mode. If you have the keyless entry option, the remote will still lock and unlock the vehicle while in Valet Mode. To exit Valet Mode: Ignition Key on, press and hold valet/override switch for approx. 3 seconds, LED will turn off and siren will chirp 2 times.

### EMERGENCY OVERRIDE:

 If you lose your transmitter, or it fails to




operate the system, unlock door and enter vehicle. The siren will sound, insert your ignition key and turn the ignition to the ON position. Then press the Valet/Override Switch, the system will be overridden and allow you to start the vehicle. The system will automatically go into valet, so it will not passively


rearm. (See Valet operation to take system out of Valet mode.)

### REMOTE PANIC:

 For your personal safety you may activate the siren by pressing button # 1 on your remote for 3 seconds. This will trigger the system into the Panic mode. The siren will sound and the parking lights will flash (optional). The panic mode will run for 45 seconds, or until you press button # 1 on your remote again. This feature will not operate when the ignition is on.



or

 


### ENTRY VIOLATION MEMORY:


In the event that your system is triggered and runs an entire cycle, when you return to disarm it instead of the usual 2 chirps you will hear 3 chirps, this is to indicate that the your system was set off., parking lights will flash 3 times as well (optional).

### CHIRP DELETE:

 To turn off ARM/ DISARM chirps, turn ignition switch on, then press and hold button # 2




or

 

until you hear a double chirp. The Arm/Disarm chirps will remain off until you repeat the procedure.

### SILENT ARM/DISARM:

 
If you wish to arm or disarm your



alarm, but do not want the siren to chirp simply press button #2 on the remote control, temporarily deleting the arm or disarm chirps.

### TEMPORARY REMOTE TRIGGER & SENSOR BYPASS:

If you would like to arm the system but need to either leave a door or trunk open (hood/ trunk optional), you can temporarily arm the system so that the door and hood /trunk triggers are not monitored. Press button# 1 to arm, then within 5 seconds press button# 2. You will hear a second confirmation chirp to let you know that the system will NOT monitor the doors. The Shock Sensor will still be monitored.

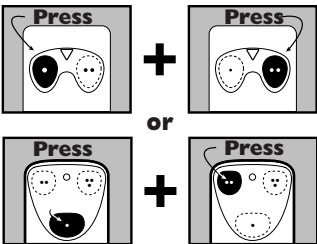


### TEMPORARY REMOTE SENSOR BYPASS:

If you would like to arm the system but want to have it not monitor the shock sensor, (leaving a child or pet in the car). Press button# 1 to arm, then within 5 seconds press button # 1&2 simultaneously (button #3 on 3-button remote). You will hear a second chirp to confirm that the sensor will be bypassed.

### NOTE:

Once you disarm and rearm the system, the door/hood trigger and sensor inputs will be monitored

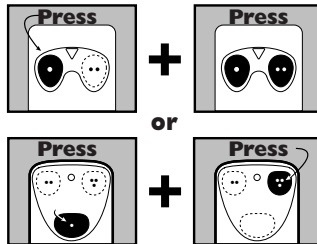


### REPLACING STOLEN OR LOST REMOTE CONTROLS:

Your authorized Dealer can program in more remote controls, and erase the codes for stolen or lost transmitters at the same time, so that they will not operate the system.

### AUTO REARM FEATURE:

If you would like your system to auto rearm (if system is remotely disarmed) and a

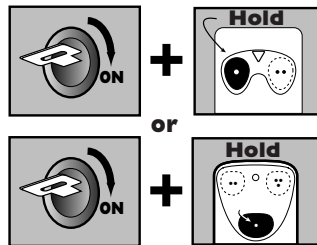

door is not opened, within 30 seconds the alarm will automatically rearm the system. This feature may be disabled by turning ignition to on and pressing and holding button#1 on the remote. Siren will chirp twice. Repeat the procedure to enable the feature.

**NOTE:** This will not work on vehicles with the illuminated entry feature enabled.

## LED STATUS INDICATORS

**Off**= System off in Active mode

**Slow Flashing**= System Armed

**Rapid Flashing**= Passive Pre Arm State

**Rapid Flashing (after disarm)**= System was triggered while away.

**On Solid**= In Valet Mode.

**On Solid(After Active Arming)**= Pre Arm State, usually approximately 10 seconds.

**On Solid (when disarmed, and not in Valet)**= Door/Hood is open.

## CHIRP INDICATIONS:



**One Chirp**= Armed

**Two Chirps**= Disarmed

**Three Chirps**= Disarmed, but system was triggered while away.

**Four Chirps**= 8 seconds after arming, indicates faulty sensor or trigger.

**Five Rapid Chirps**= Warn away triggered

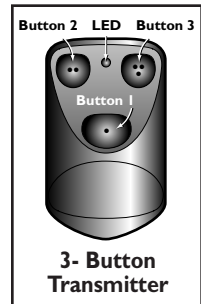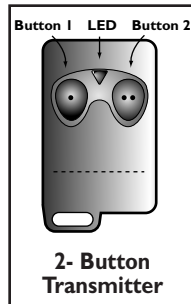

## REMOTE CONTROL OPERATION FEATURES (2 & 3 BUTTON TRANSMITTERS)

2-Button TRX	3-Button TRX	Duration	Function
1	1	SHORT	ARM/DISARM
1	1	LONG (3 SEC.)	REMOTE PANIC
2	2	SHORT	SILENT ARM/DISARM
2	2	LONG (3 SEC.)	2ND CHANNEL (TRUNK)
1/2	1/2	SHORT/SHORT	TEMP.TRIGGER BYPASS
1/1&2	1/3	SHORT/SHORT	TEMP.SENSOR BYPASS
1&2	3	SHORT	AUX. 3RD CH. OUTPUT