

# SERIES 700/700E FACTORY KEYLESS UPGRADE

## OWNER S MANUAL



**Congratulations** on your purchase of the Factory Keyless Upgrade security system. Your Factory Keyless Upgrade is manufactured in the U.S.A. and designed by leading security experts using the latest state of the art technology.

### **Items Supplied with the Factory Keyless Entry**

- Receiver and control module
- Valet/override switch
- Wiring harness, fuseholder & fuse
- LED status indicator
- Siren\*
- Shock sensor\*

\* NOT INCLUDED WITH "E" MODELS

The Factory Keyless Upgrade is designed to interface with an existing factory keyless entry system, converting it to a full security system.

### **Arming Operation:**

To Arm the system, press the lock button on the factory remote.

The horn/siren will chirp once.

The parking lights will flash once (optional).

The doors will lock.

The LED will turn on solid for 2 seconds, then begin flashing slowly. Once the LED starts flashing the system will be fully armed.

### **Disarming Operation:**

To Disarm the system, press the unlock button on the factory remote.

The horn/siren will chirp twice.

The parking lights will flash twice (optional).

The doors will unlock.

The LED will stop flashing.

### **Passive Arming:**

The passive arming feature may be selected during installation to keep the vehicle secure in the event the user forgets to arm the system upon exiting the vehicle. After the ignition is turned off and the last door is closed, the led will flash rapidly signifying that the system will arm in 30 seconds. After 30 seconds the sytem will arm as described under Arming Operation, but the doors will not lock.

## **Valet Mode:**

In the event the vehicle requires servicing, washing, etc., the Valet Mode can be activated to disable the alarm, while still allowing the keyless entry feature to operate. The Valet Mode will also disable the system's passive arming feature (if programmed for passive arming). To enter Valet Mode:

Turn the ignition key on.

Press and hold the valet/override switch for approximately 5 seconds.

The LED will turn on solid indicating the system is in Valet Mode. To exit Valet Mode repeat the procedure above. The LED will turn off indicating the system has exited Valet Mode.

## **Emergency Override**

In the event the remote transmitter is lost or stolen, the Emergency Override feature may be used to deactivate the system. To override the system:

Turn the ignition key on.

Press and hold the valet/override switch for approximately 5 seconds.

The LED will turn off indicating the system is disarmed.

## **LED Status Modes:**

Valet = Solid

Pre-Arm State = Solid for 2 seconds

Armed = Slow flash

Disarmed = Off

Passive Arming Sequence = Rapid flash

System triggered while away = Slow double flash

