


STARTER DISABLE/KEYLESS ENTRY OWNER'S MANUAL

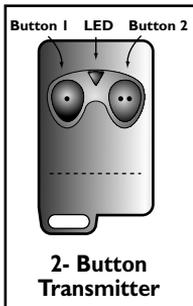

Congratulations on your purchase of your vehicle security system. Your system is manufactured in the U.S.A. and designed by leading security experts using the latest state of the art technology. Your security system is designed to give you trouble free operation for years to come. The system includes an LED, and override/valet switch, two remote controls and the main control module.

Arming Operation: To manually arm the system. Press button one on the 2-button remote. The LED will start slowly flashing. The starter is now disabled.

Disarming Operation: Press button one on the 2-button remote. The LED will stop flashing. The starter is now engaged.

Illuminated Entry (Optional): Your system can also turn on your interior lights when you disarm your system for 30 seconds or until the ignition key is turned on.

Car Locator Feature (Optional): When you disarm your system, if your parking lights are connected to the system, the parking lights will flash twice and then illuminate for 30 seconds or until the ignition key is turned on.

Passive Arming: If your system is programmed to passive arm, the system will automatically disable the starter 30 seconds after the ignition has been turned off. Once the ignition switch has been turned off, the LED will start rapidly flashing to let you know that in 30 seconds the system will be engaged.

Valet Mode: Valet mode will keep your alarm system from passive arming (if programmed to be passive arming), if you need to have your vehicle serviced, or run it through a car wash, etc. To put your vehicle in Valet Mode, turn the ignition key on and press and hold your valet/override switch in for approximately 5 seconds. The LED will turn on solid. Your vehicle's system is now in Valet Mode. If you have keyless entry features or remote auxiliary features, they will still operate. Deactivate Valet Mode: It will stay in Valet until you repeat the procedure and the LED will turn off. Siren will chirp twice.

Valet Mode via the Remote: To put the system in valet with your remote control, press button #2, then button #1 for 3 seconds and the system will enter the valet mode. The LED will stay on solid. (If optional siren or horn is connected, the siren/horn will chirp 5 times). To exit the valet mode, via remote, repeat the procedure. The LED will go out and optional siren/horn will chirp twice.

Remote Chirp Delete: If your system is hooked up to the vehicle horn or the siren, you can arm and disarm the system

without the arm/disarm chirps: Press button #2 momentarily then button #1 and the system will arm or disarm silently.

Remote Panic: Pressing button #1 for 3 seconds will trigger the system into Panic mode. The siren will sound and parking lights will flash (optional). The Panic mode will run 30 seconds, or you can shut it off by pressing button #1 again.

Automatic Reset: If your system has been triggered by shock sensor, door trigger, or any other optional sensor or input, the siren will sound and the lights will flash (optional) for 45 seconds and then reset.

Auxiliary #2: If your system is connected to auxiliary #2 feature (trunk or hatch pop) use the feature by pressing and holding button #2 for 3 seconds and auxiliary #2 feature will operate.

Horn or Siren Output (optional): Your remote starter disabler system can also be connected to your vehicle horn or a siren. The horn/siren will give you confirmation chirps when you arm or disarm the system.

Multi-Car Operation: Your remote will control up to 3 systems. By teaching button #2 to a second system, it will allow you to operate both vehicles with one remote. To access a 3rd vehicle with the 2-button remote, you can program button 1 and 2 to the third vehicle. Auxiliary channels 2 and 3 will not operate with this remote; only arm and disarm functions.

Overriding the System: If you have lost your remote or it does not disarm the system, you can manually override the system by turning the ignition key to the ON position and pressing and holding the override/valet switch for 2 seconds. The system will disarm and go into valet mode automatically.

Code Learning Mode: Your system will keep in memory codes for up to 3 different remotes. To enter the code learning mode: turn your key ON, OFF, ON, OFF and ON (leave in the ON position). You will hear a single chirp. Within 5 seconds press in the valet/override switch and hold. You will hear 3 chirps. Within 5 seconds, press up to 3 different remote con-

trol buttons, that you desire to operate the system. Note: When the system is in the code learning mode, it will drop all remotes that were previously programmed in the system.

LED Status Modes:

Valet = Solid

Armed = Slow flash

Disarmed = Off

Pre Arm Passive = Rapid flash

Siren Chirp Modes:

Armed = Single chirp

Disarmed = Two chirps

Operating Override/Valet Switch:

Valet = Ignition switch on: Press override/valet switch and hold for 5 seconds.

Disengage Valet = Repeat above process

Manual Override System = Ignition On and press switch.

Code Learning = Turn ignition key Off & On 3 times (leave on the 3rd time), press and hold override/valet switch for 5 seconds.

Keyless Entry (optional): Your system may be connected to your central locking system, so that when you arm your system it will lock the doors remotely. The system will also unlock your doors when you disarm the system.