

# FM 2-WAY TRANSMITTER

## TRANSMITTER OPERATIONS

1 - Arm/Disarm



2 - Remote Start/Off

2 & 3 - Clock Set  
- Alarm Clock Set  
- Remote Start  
Timer Set

3 - Trunk Aux.

4 - Aux. 2

5 - Confirm Status  
- Illuminate  
Display

**1- ARM/DISARM/PANIC Button** - To arm or **disarm** the system, press button 1. To activate the panic feature, press and hold button 1 for three seconds.

**2- START Button** - To start the vehicle, press and hold button 2 for two seconds. To shut down the vehicle, press and hold button 2 for two seconds.


**3- TRUNK/AUX 1 Button** - To activate the trunk output, press and hold button 3 for two seconds.

**4- AUXILIARY 2 Output** - To activate the **Aux.** 2 output, press and hold button 4 for two seconds.

**5- CONFIRMATION Button** - To check current status of the system, press button 5. The current status of the system will be displayed & illuminated on the transmitter.


## Transmitter Functions

### Button 1

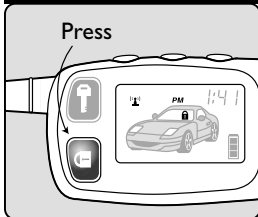

Press

**Arm -**  
The display will show a lock icon and the animated (car) icon to confirm arming. Lights will flash once.

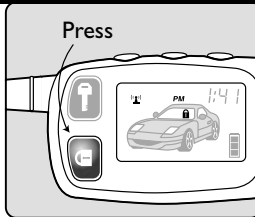



Press


**Disarm -**  
The display will show an unlock icon and to confirm disarming the animated (car) icon. Lights will flash twice.



# Transmitter Functions
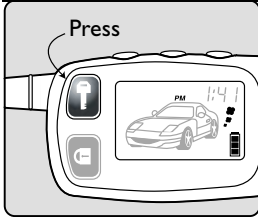
## Button 2

 


 
**Start** -  
The display  will indicate the ignition is turned on and the engine is going to crank.




**Engine Run** -  
When the engine starts and continues to run, the  icon will be displayed, and the  icon will remain displayed.


## Button 3

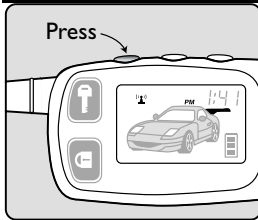

 
**Trunk** -  
The display will show and flash this icon  opening to confirm.

## Button 4

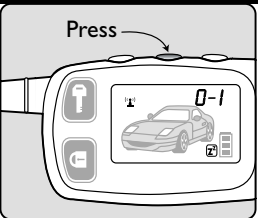

 **Aux. 2 Output** -  
The display will show  to confirm the Auxiliary 2 Output.

## Button 5

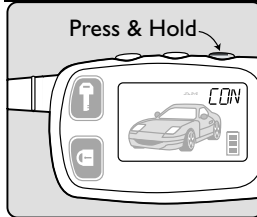


**Status Confirmation**  
Press and Hold to toggle to the appropriate feature. Release at the desired status function:  
CON - Confirm Alarm or Remote Start Status.




**Continue to hold Button 5:**

 CHP- Feature not available



**Continue to hold Button 5:**

 SND - Transmitter Alert Tones ON/OFF (Repeating the cycle and releasing at SND turns on or off)



**Continue to hold Button 5:**

PSV- Feature not available




**Continue to hold Button 5:**


LPG- Feature not available


## Transmitter Functions

### Buttons 2&3

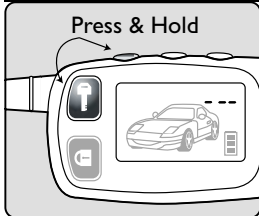


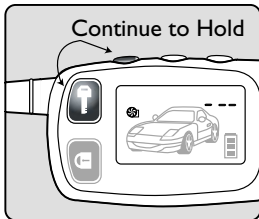
Press button #5 (Confirm Status) to set. The transmitter will play a tune to indicate new time is set.

**Set Clock -**  
Press and hold buttons 2 & 3 for 2 seconds. The transmitter will beep twice and the display will show . Change hour by pressing button 2; change minute by pressing button 3.

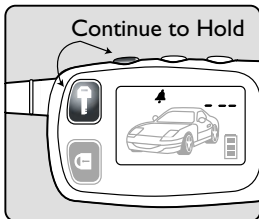


**Turning Off Alarm Clock -**  
Press and hold buttons 2 & 3 until the transmitter beeps three times and the alarm clock icon appears. Press transmitter button 1. The icon will disappear and the alarm will be turned off.

**Set Alarm Clock**  
Press and hold buttons 2 & 3 until the transmitter beeps three times and the alarm clock icon  appears. Confirm the same way as setting clock.




 
**Turning Off Start Timer -**  
Press and hold buttons 2 & 3 until the transmitter beeps four times and the alarm clock icon appears. Press button 1. The icon will disappear and the alarm will be turned off.


**Set Start Timer -**  
Press and hold buttons 2 & 3 until the transmitter beeps four times and the fan icon  appears. Set the start timer the same way as setting the clock. The fan icon will remain displayed.


### Alarm Trigger Indications




  
**Warn Away -**  
If the warning stage is triggered, the  icon will flash.





**Shock Sensor -**  
The display will show Shock and flash the animated  icon to indicate shock sensor triggering.



  **Door -**  
If a door is opened while the system is armed, the display will show .



 
**Hood -**  
If the hood or trunk is opened while the system is armed, the  icon will show and the lights will flash.



**Panic -**  
The display will show *PAN* when the Arm/Disarm button is held to enter the Panic mode.

### Low Battery Indication



**Low Battery -**  
When the transmitter battery needs replacement, the display will flash the  icon.

 
## Transmitter Functions

### Valet Indications




#### Valet Mode -

The display will show **---U** to confirm entering the Valet mode.



#### Unlock (Valet) -

 If the doors are unlocked with the transmitter in Valet mode, the display will show the **T** icon to confirm unlock.



#### Lock (Valet) -

If the doors are locked with the transmitter in Valet mode, the display will show **T** to confirm locking.

## Connecting FM 2-way Kit to System Module

